**Declaration of conformity for the European Community**

ATLINKS declares that Temporis IP701G telephone complies with the relevant basic requirements and provisions of the European directive 1999/5/CE. You can download the declaration of conformity from the following address: **www.alcatel-business.com**.

The CE logo shown on the products indicates that they are compliant with the basic requirements of all the applicable directives.

$CE$

**Environment**

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers' are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste. If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

(a)- If you are a professional user, please follow your supplier's instructions.
(b)- If the appliance is rented to you or left in your care, please contact your service provider.

**Please help us protect the environment in which we live!**
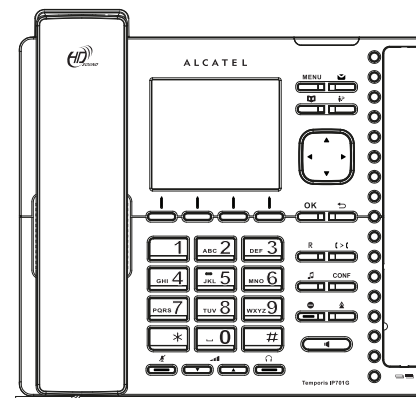
**Notice of copyright and trademarks**

Model : IP701G
A/W No.: 10001422 Rev.0 (EN)
Printed in China

# ALCATEL
home & business phones

# Temporis IP701G
# QUICK START GUIDE



| | |
|---|---|
| (indicator) | Message Waiting/Missed calls indicator |
| ◯ | Lines, direct memories and other programmable function keys |
| (nav keys) | Navigation keys |
| (softkeys) | Softkeys |
| **OK** | OK/Select |
| ↩ | Back/Cancel |
| **MENU** | Menu |
| ♪ | Call Hold. In idle mode : quick access to network info |
| ◁ | Activate/deactivate handsfree |
| (key) | Second function key set (light on when active) |
| 🔇 | Mute/unmute a call (light on when muted) |
| ◢◢ | During ringing : increase or decrease ringer volume In communication : increase or decrease earpiece, headset or handsfree volume |
| ⌒ | Headset key (light on when in use) |

| | |
|---|---|
| ✉ | Voice mail key |
| 📖 | Phone book key |
| ℹ? | Call log |
| R | Flash key |
| ( > ( | Call transfer key |
| **CONF** | Call conference key |
| ⊖ | Do Not Disturb key |
| ☎ | Redial key |
| # | Enable/disable key lock (long press) |

**Display icon description**

| | | | |
|---|---|---|---|
| ☎ | Line registered | ↙ | Call in |
| ☎ | Line unregistered | ↗ | Call out |
| ⊘ | Line disabled | ↪ | Call forward |
| 🔊 | Handsfree mode activated | ⊖ | Do not disturb function activated |
| ⌒ | In headset mode | ✉ | Voicemail |
| ↗ | Missed calls | 🖥! | Internet is disconnected |
| 🔕 | Ringer off | ⊷⊙ | Key lock enabled |

## Phone web interface

1. Check phone IP address pressing 🎵 or press **MENU** > **2.Status** > **1.Network** > **1. IPV4** or **2. IPV6** (depending of your network).
2. Open a web browser on your computer. Enter http:// and the IP address in the address bar and validate.
3. Default login and password are « user/user » for users and « admin/admin » for administrator.
4. Minimum config is sip account. Check administrator guide for details.

## Language setting

- Press **MENU** > **3.User settings** > **1.Preferences** > **1.Language**.
- Select the desired language and press **OK** .

## Making a call

- **Pre-dialling :** enter the phone number and pick up the handset.
- **Direct dialling :** lift the handset and enter the phone number.
- **Handsfree :** enter phone number and press ▭ or vice versa .
- **Headset :** enter phone number and press ⌒ or vice versa.

## Accepting a call

- **With the handset :** pick up the handset.
- **With a headset :** press ⌒ .
- **With the handsfree :** press ▭ .

## Putting a call on hold

- Press key 🎵 . To retrieve the call press **Resume** soft key.
**Note :** with more than one active call, select desired call with the navigator keys and use the corresponding soft key to hold or resume.

## 3-party conference

1. Once in line with 1st caller, press **Conf** soft key or **CONF** hard key, 1st caller is put on hold.
2. Then call the 2nd number.
3. After, 2nd call is established, press **Conf** soft key to set up the conference.

## Call transfer

**Attended transfer :**
1. Press **Transfer** soft key or 〔 > 〔 hard key during the active conversation, the call is put on hold.
2. Dial the second telephone number and press **Dial** soft key.
3. When the call is answered, then press **Transfer** soft key to complete the operation.

**Blind transfer :**
1. Press **Transfer** soft key or 〔 > 〔 hard key during the active conversation, the call will be on hold.
2. Then press **Blind** soft key, dial the 2nd telephone number and press **Transfer** soft key.

## Redial

1. Press 🔺 , select the desired call and press **Dial** soft key or pickup handset or press ⌒ or ▭ .

## Call forward

1. Press **MENU** > **1. Features** > **1.Call** > **2. Call Forward**.
2. Select the line, the type of forward, enter the destination number and status and **Save**.

## Call list

1. Press 📞 key or **MENU** > **1.Features** > **3. Call history** > **1.All calls or 2**.**Missed calls**.
2. Scroll through the list using ⟨∴⟩ .
3. To dial an entry, press **Dial** soft key or pickup handset or press ⌒ or ▭ .

## Phonebook

**Access phonebook :**
1. Press **Directory** soft key or 📖 hard key.
2. Select **Local** or other phonebook and press **OK** .
To dial an entry, press **Dial** soft key or pickup handset or press ⌒ or ▭ .
**Add new entry :**
1. Press **Directory** soft key > **1.Local** > Press **OK** > press navigator right key > Press **Add.**
2. Enter name and number and press **Save** soft key.

## Programmable keys and speed dial keys

**Program function keys (lines, memory, call forward, BLF, etc) :**
1. Press **MENU** > **3.User Settings** > **4.Programmable Keys**.
2. Navigate to the desired key and press **Edit**. Select function and press **OK** .
3. Fill in parameters if any and press **Save** softkey.
**Program speed dial keys :**
1. Press **MENU** > **1.Features** > **5. Speed dial** > select in the list the desired key (0 to 9) with the navigator > press **Add** > enter name and number > press **Save**. If you long press on a key, you directly call the stored contact.

## Do not disturb

1. Press ⊖ hard key or **MENU** > **1.Features** > **1.Call** > **1.Do not disturb**.
2. Select the line and status, and press **Save** soft key.

## Voice mail

1. To access your voice mailbox, press ✉ hard key.
2. Select the line and press **OK** to call .
Note: An icon will be shown at the right hand side of a line in this menu when there are pending messages.

## DECT Accessories

**Register a compatible Alcatel DECT accesory :**
1. **MENU** > **3. User settings** > **5. DECT headset** or > **6. DECT handset**.
2. Select **Register**.
3. Perform the steps indicated in your Alcatel compatible device's installation guide.

## Phone lock

1. Long press on # to enable keypad lock
2. Long press on # to disable key lock, then enter PIN code (1234 by default) when requested.